


# MultiView Quattro Video Modes 1 through 18



To activate: press and hold **VID** button for 2-3 seconds until **SET VID** label appears on the screen, indicating that you have entered program mode. Pressing VID button selects next mode, as shown below.

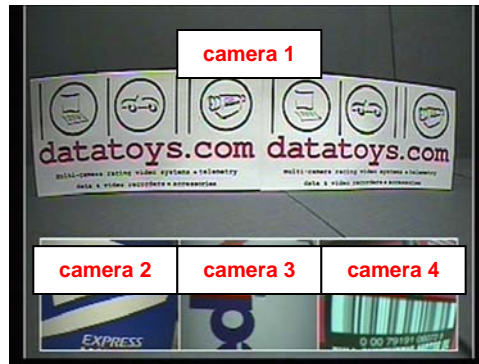

Video Mode 1



Video Mode 2



Video Mode 3



Video Mode 4



Video Mode 5



Video Mode 6



Video Mode 7



Video Mode 8



Video Mode 9



**Video Mode 10**



**Video Mode 11**



**Video Mode 12**



**Video Mode 13**




**Video Mode 14**



**Video Mode 15**



**Video Mode 16**

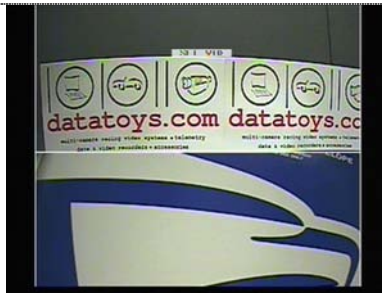

**Video Mode 17**



**Video Mode 18**